



## Charging Your Devices

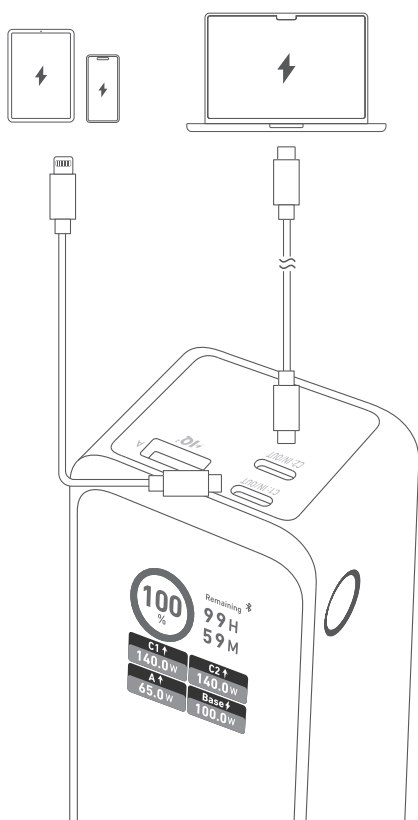


## Recharging Your Power Bank

Recharge the power bank via the USB-C ports.

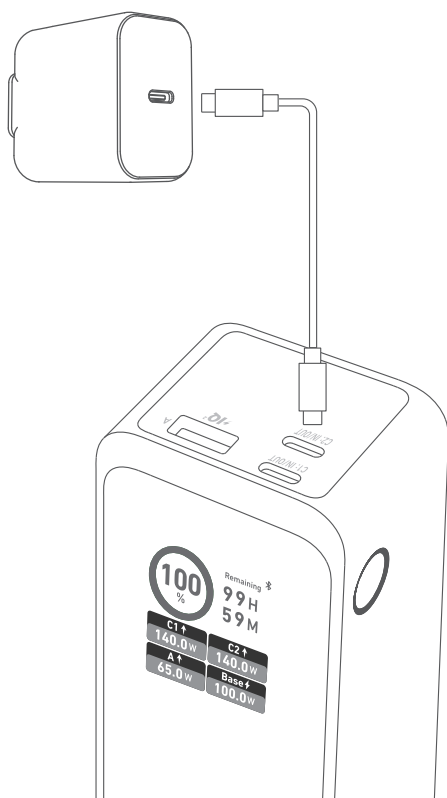

If you have purchased Anker 100W Charging Base, you can also use it to recharge the power bank.

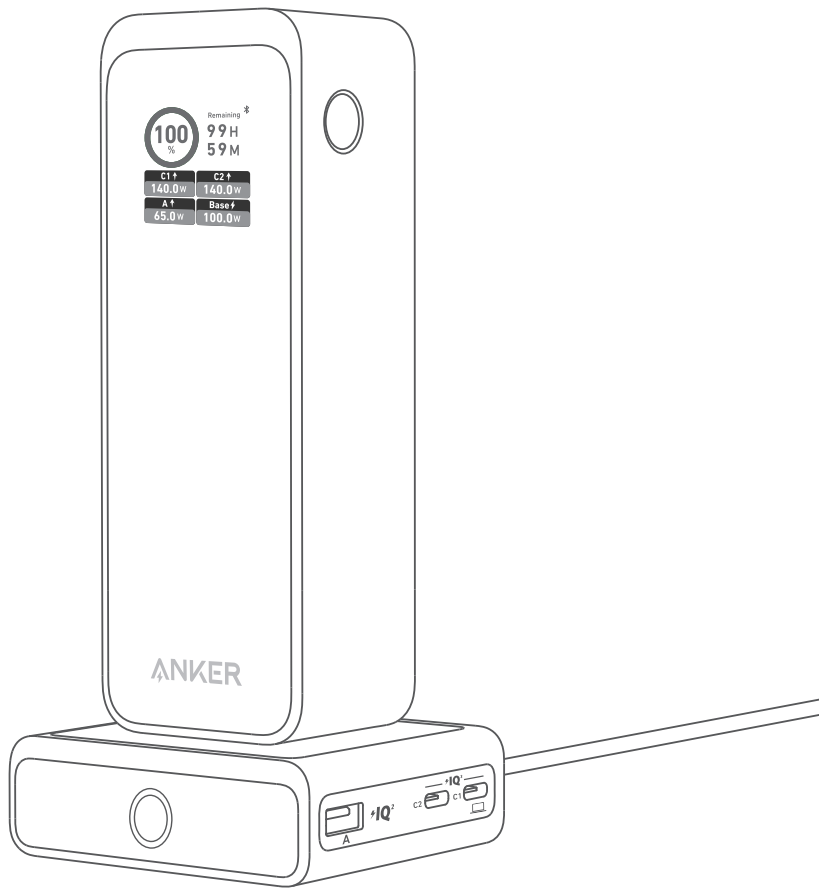

## Connecting the Power Bank to the App


1. Download and open the Anker app.

1




2. Switch to the Bluetooth interface by pressing the button.

2

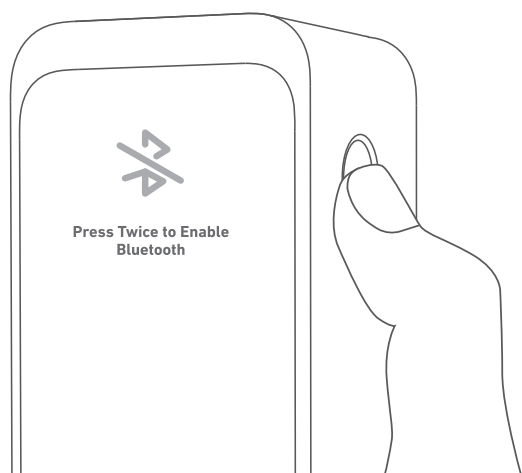


3. Press the button twice to enable Bluetooth.

3

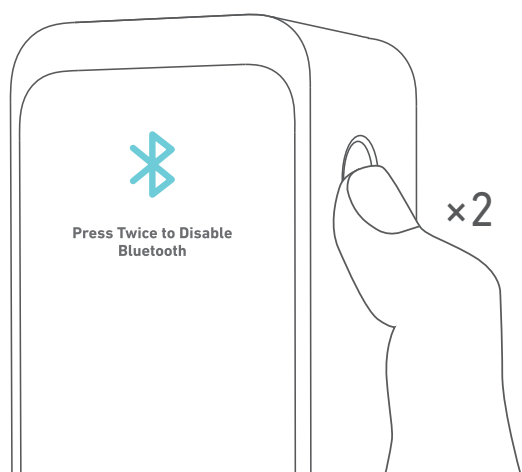

4. Search for Bluetooth in the app and connect to it.


4

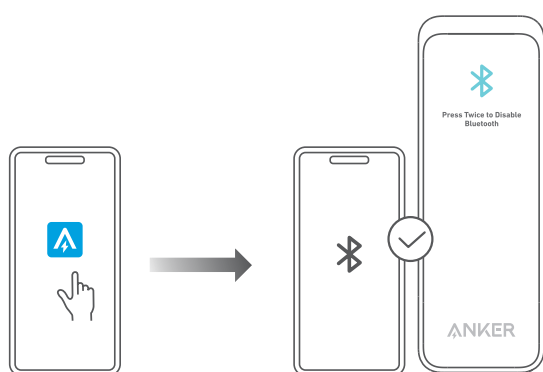

## Trickle Charging Mode


1. Press the power button twice to activate trickle charging mode.

1

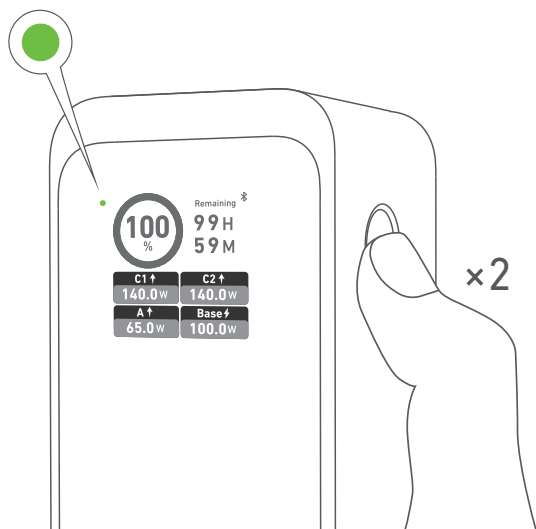


2. Connect your earbuds or other low-power devices to the USB-A port to start charging.

2

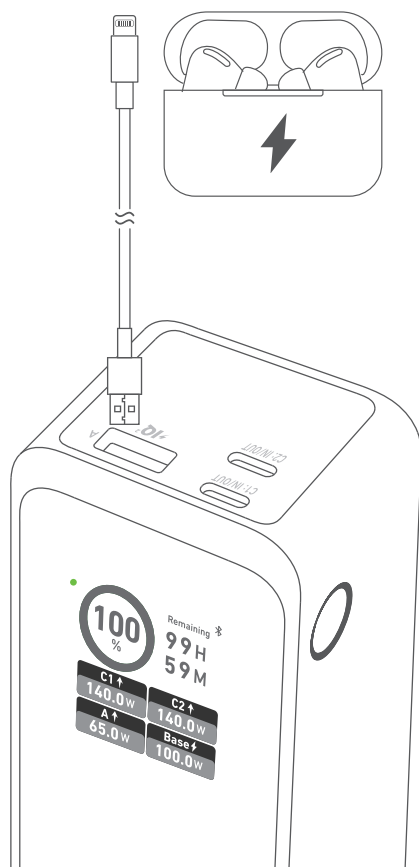



3. Press the power button twice to deactivate trickle charging mode.

3

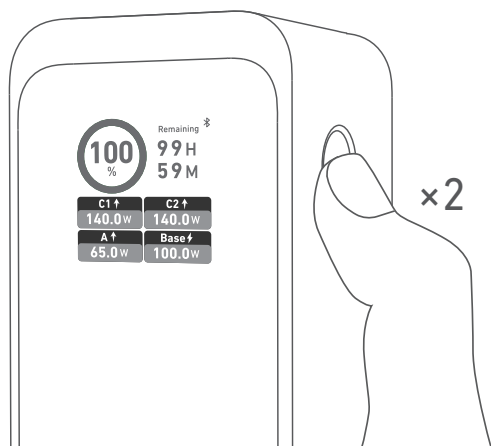

## Display Screen Guide

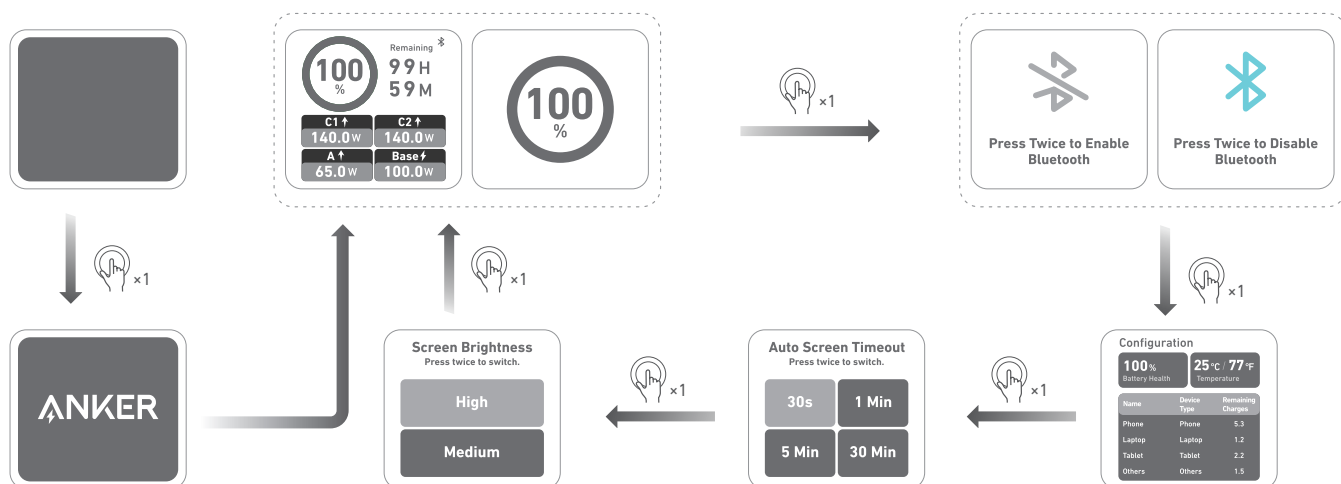

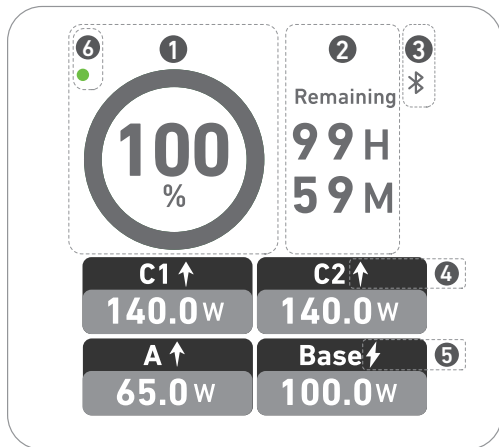

1. Remaining Battery
2. Remaining Battery Duration / Full Recharge Time
3. Bluetooth
4. Output
5. Input
6. Trickle Charging Mode

## Specifications

Cell Capacity	27,650 mAh (3,950 mAh × 7)
USB-C1 / USB-C2 Input	5V ≡ 3A / 9V ≡ 3A / 15V ≡ 3A / 20V ≡ 5A / 28V ≡ 5A
Charging Base Input	21.5V ≡ 4.65A
USB-C1 / USB-C2 Output	5V ≡ 3A / 9V ≡ 3A / 12V ≡ 1.5A / 15V ≡ 3A / 20V ≡ 5A / 28V ≡ 5A
USB-A Output	5V ≡ 3A / 9V ≡ 2A / 10V ≡ 6.5A / 12V ≡ 1.5A
USB-C1 + USB-C2 Output	240W Max
USB-C1 / USB-C2 + USB-A Output	250W Max
USB-C1 + USB-C2 + USB-A Output	250W Max
Total Output	250W Max

### Default exposed network interfaces and services

BLE (Bluetooth Low Energy) configuration status description: When the device is not yet connected, it will automatically enable BLE broadcasting and activate the BLE service to provide Bluetooth remote control capability.