
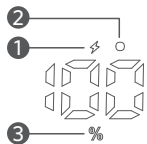




Het accuniveau controleren

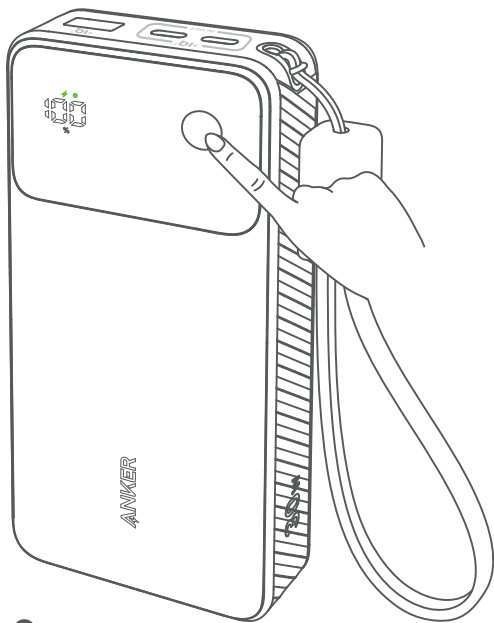


1. Opladen
2. Druppellaadmodus
3. Resterend accupcentage

Uw apparaten opladen


Laad uw telefoons en tablets op via de USB-poorten.

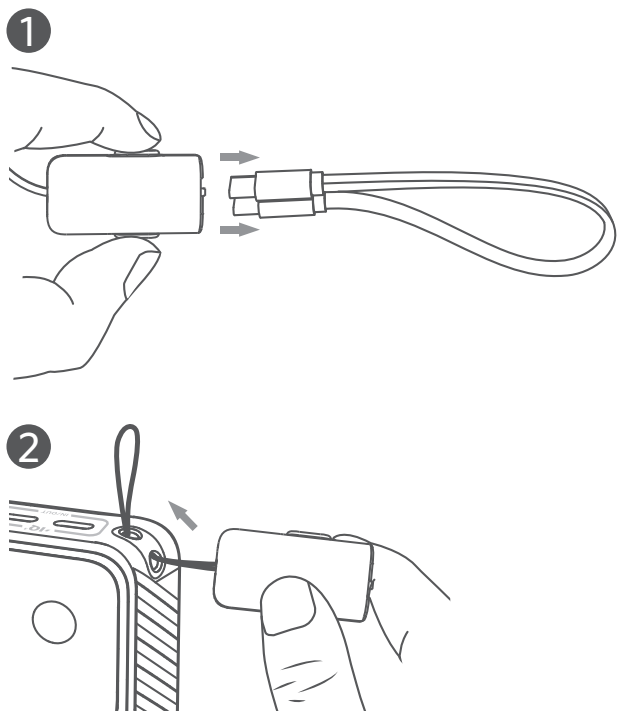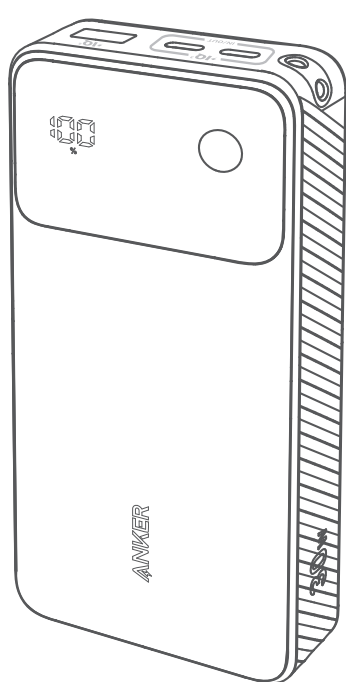

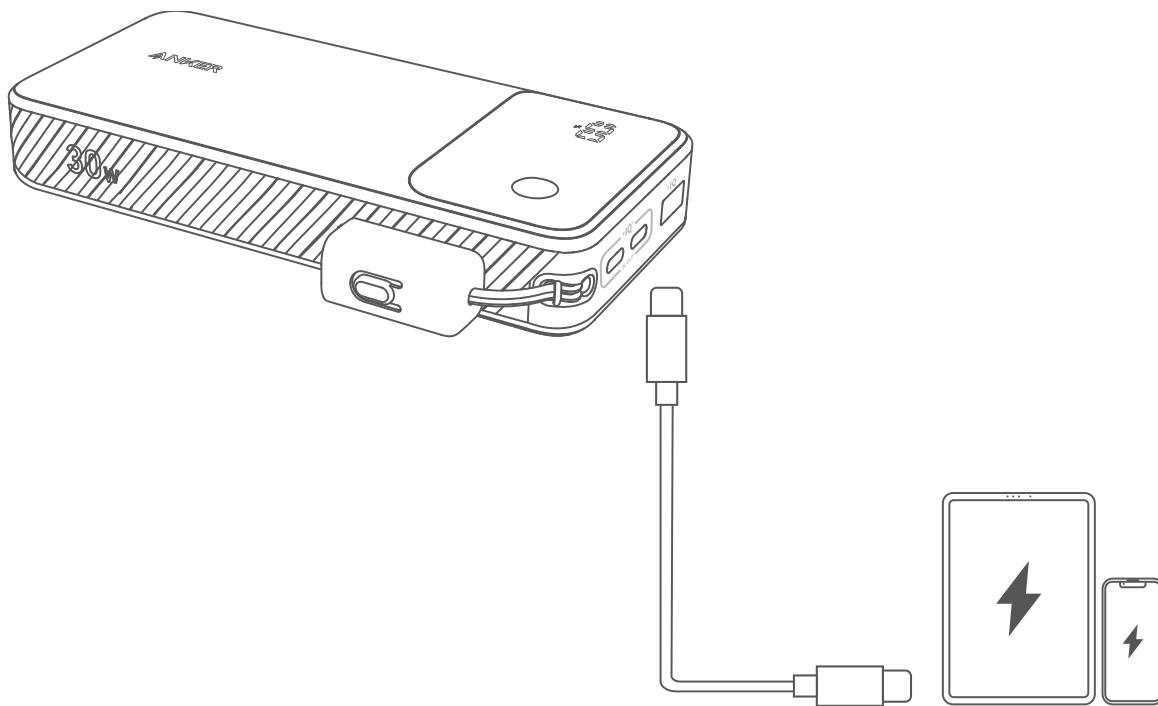


De powerbank herladen

Laad de powerbank op via de USB-C-poorten.

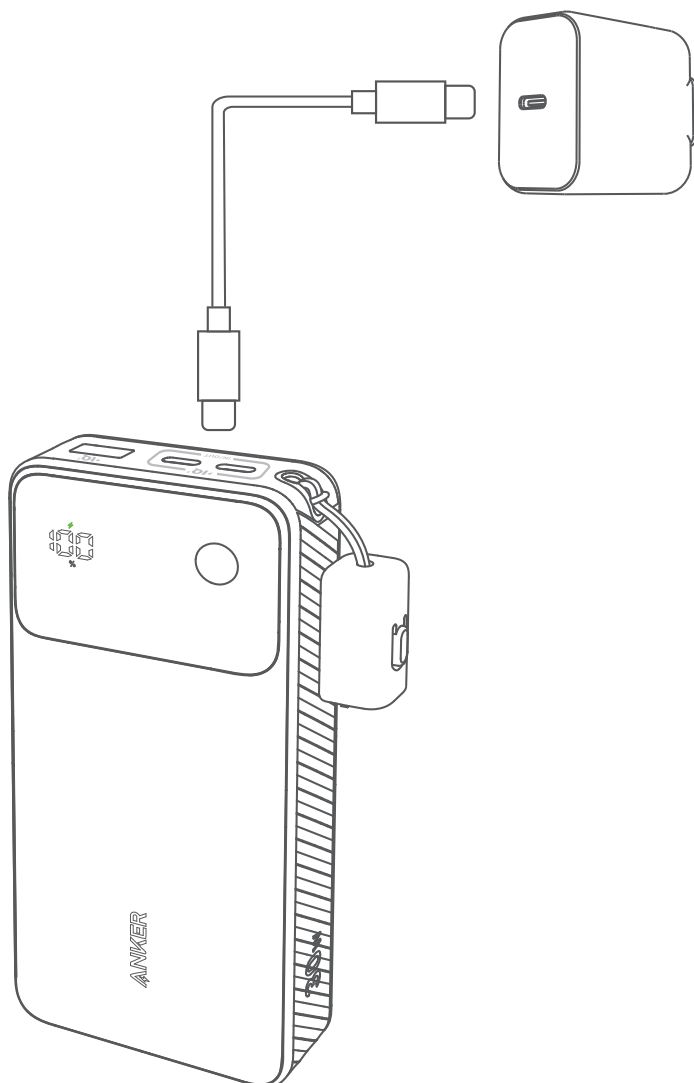


Druppellaadmodus (lage stroom laadmodus)


1. Activeer de druppellaadmodus.

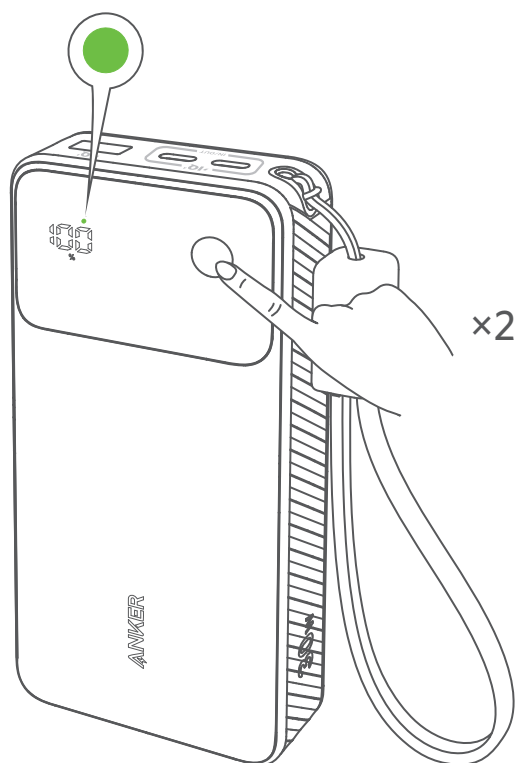

2. Laad uw oordopjes of andere apparaten met een laag vermogen op met de druppellaadmodus.

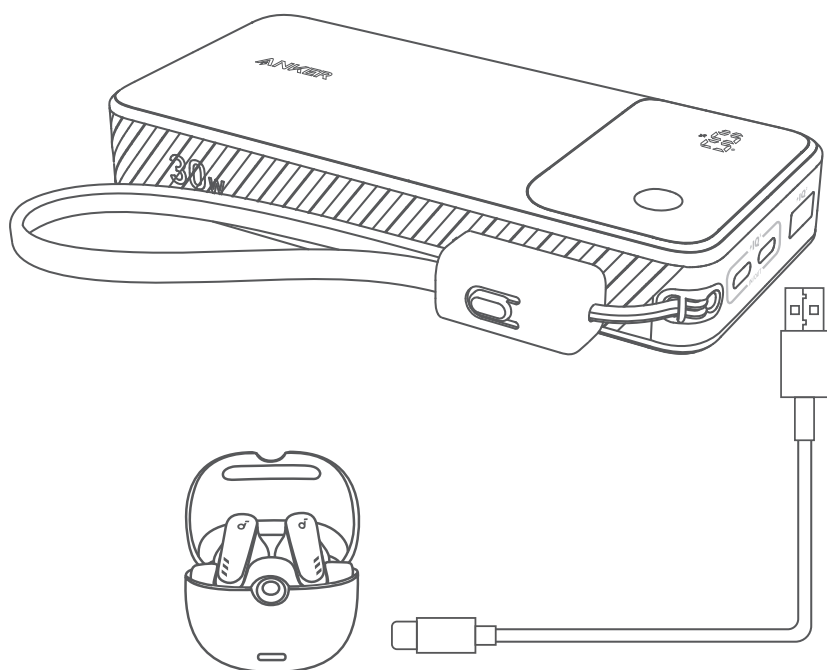

3. Verlaat de druppellaadmodus.

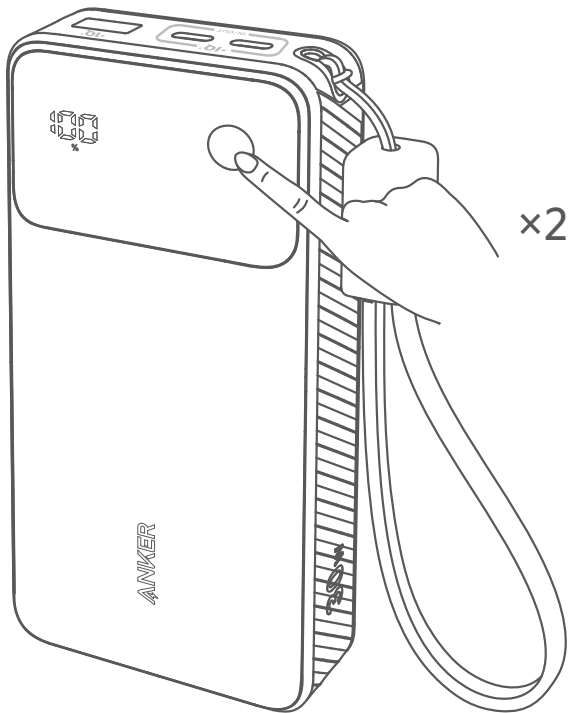

Specificaties

Totale Celcapaciteit	20.000 mAh
Ingang	USB-C1 / C2: 5V $\equiv$ 3A / 9V $\equiv$ 3A / 15V $\equiv$ 2A / 20V $\equiv$ 1,5A (30W max)
Uitgang	USB-C1 / C2: 5V $\equiv$ 3A / 9V $\equiv$ 3A / 10V $\equiv$ 2,25A / 12V $\equiv$ 1,5A / 15V $\equiv$ 2A / 20V $\equiv$ 1,5A (30W max)
	USB-A: 5V $\equiv$ 3A / 9V $\equiv$ 2A / 12V $\equiv$ 1,5A (18W max)
Totale Uitvoer	5V $\equiv$ 4,8A (24W max)