

NVR USB Flash Driver Update User Manual


NVR USB Flash Driver Update

STEP1 Unzip the folder

You can first visit [eufy official website](#) to download the firmware package. After decompressing it, you will find the upgrade file with the ".bin" extension.

STEP2 Upgrade the NVR


- 1) Connect the USB Flash Driver to your computer. Copy (do not open) the upgrade file with the ".bin" extension, and transfer it to the USB Flash Driver .
- 2) Insert the USB flash drive into the USB port of the NVR, then navigate to Settings-System-USB Flash Driver Update in the NVR control page. Click on USB Flash Driver Update to start the upgrade.
- 3) After Update is completed, the NVR will automatically restart. If the NVR restarts, this indicates that was successful.

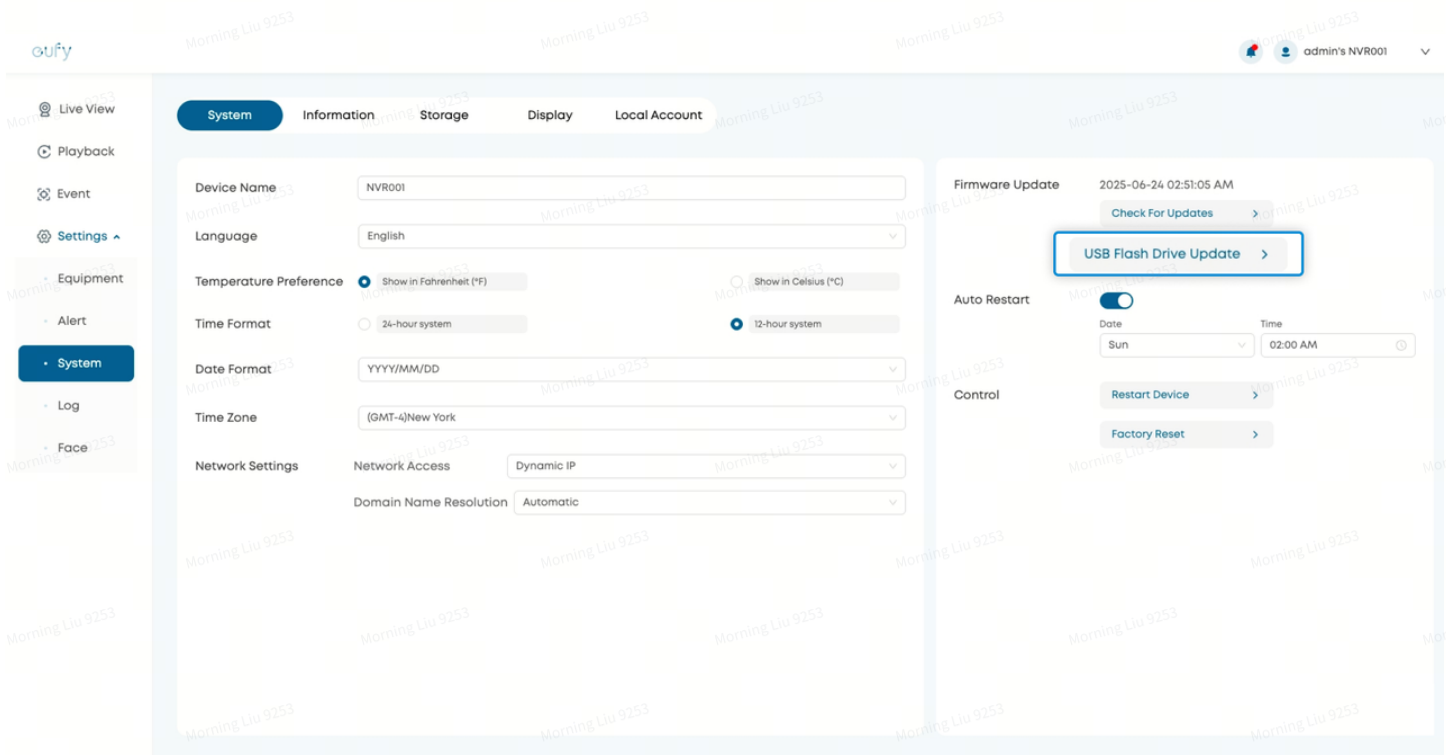

STEP3 NVR Upgrade verification

You can check if your monitor has been upgraded to the latest version by navigating to Settings-System-Information on your monitor. Please ensure that the monitor's version number matches

 the version you downloaded.

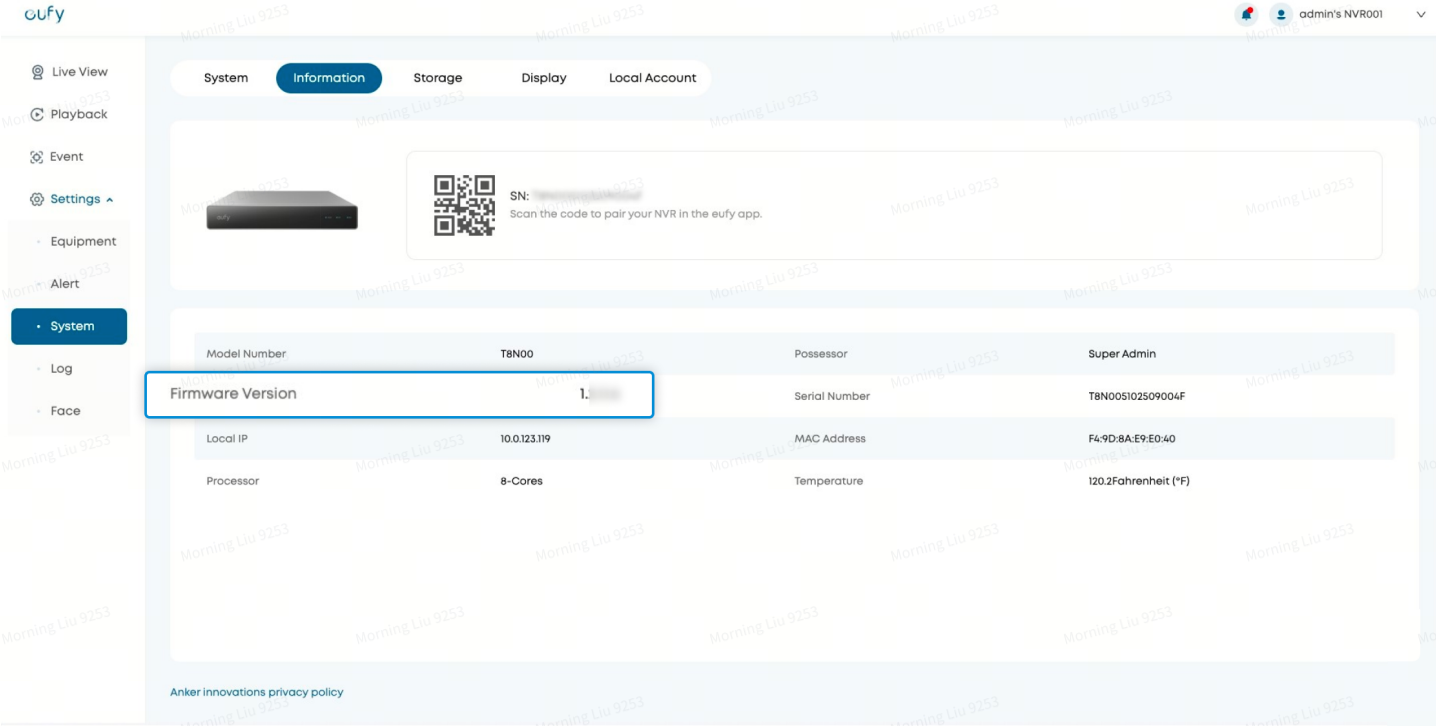


Camera USB Flash Driver Update

STEP1 Upgrade the camera

1)Insert the USB flash drive into the USB port of the NVR, then navigate to Settings-Equipment-PoE Cam-Setting （the camera name may change for different product and versions.） Update in the NVR control page. Click on USB Flash Driver Update to start the upgrade.

 2)After Update is completed, the camera will automatically restart. If the camera restarts, this indicates that was successful.

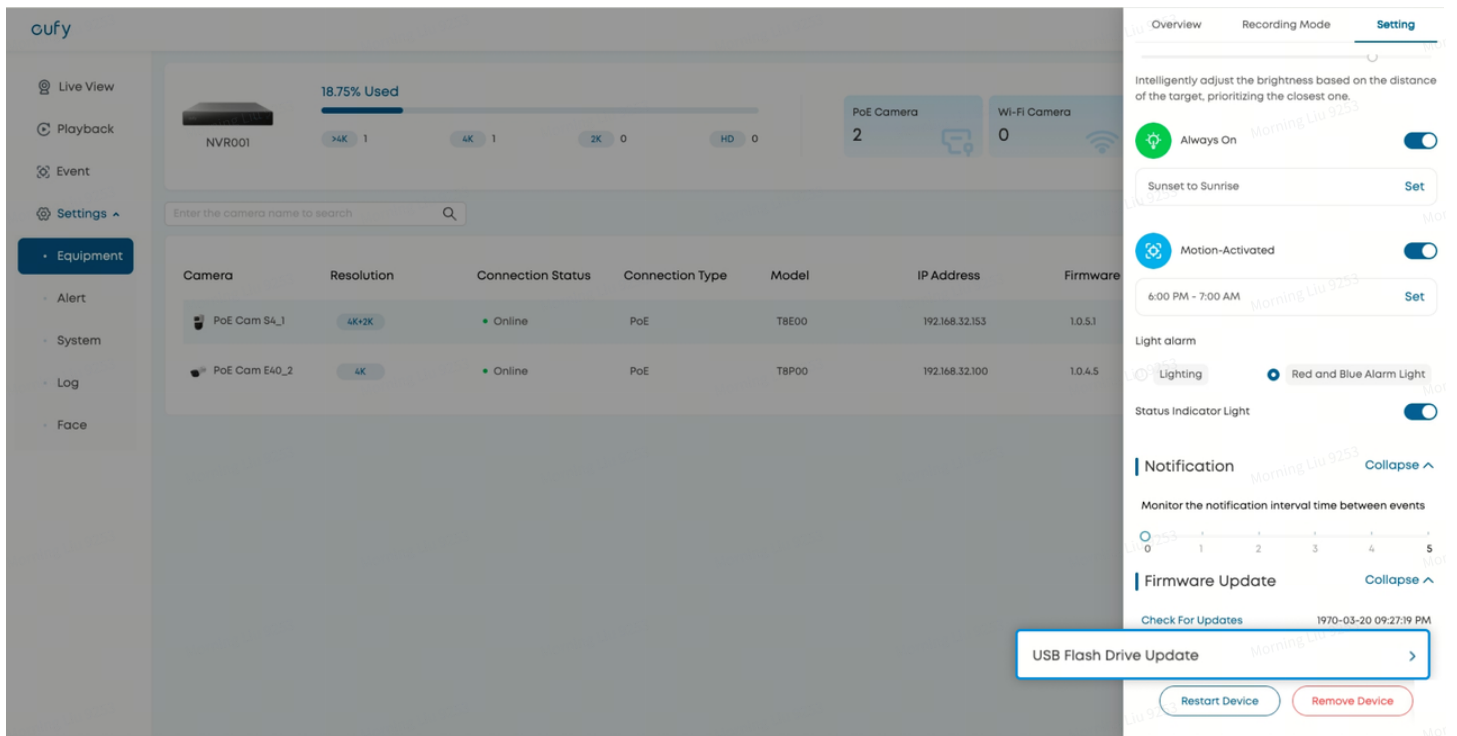

STEP2 Camera Upgrade verification

You can check if your monitor has been upgraded to the latest version by navigating to Settings-Equipment-Firmwar Version on your monitor. Please ensure that the monitor's version number matches the version you downloaded.

