

What's in the Box

At a Glance

Before Mounting

1. Download the eufy App
2. Add HomeBase Mini
3. Add the Camera
4. Fully Charge the Camera
5. Insert and Remove the microSD Card (Optional)

Before Mounting

1. Choose a Location
2. Install the Mounting Bracket
3. Select a Mounting Option
4. Adjust the Camera Field of View

Detaching the Mounting Bracket (Optional)

 
Notice

What's in the Box


For Camera Installation



Camera




Magnetic Mounting Bracket

 

Mounting Base



 Screw Pack



0.6m Type-C Cable

 
For HomeBase Setup (Only available in 2-cam / 4-cam kits)




HomeBase Mini



5V/2A Power Adapter



2m Power Cable

 


1.2m Internet Cable


For Solar Panel Installation (Only available in kits with solar panel)



 Solar Panel




Solar Panel Mounting Bracket

 

Screw Pack

 Other



Quick Start Guide




Warning Sticker

Items	Solo Cam	Cam with Solar Panel	2-Cam kit	2-Cam kit with Solar Panels	3-Cam kit	4-Cam kit	4-Cam kit with Solar Panels
Camera	1	1	2	2	3	4	4
Solar Panel	0	1	0	2	0	0	4
Magnetic Mounting Bracket	1	1	2	2	3	4	4
Mounting Base	1	1	2	2	3	4	4
Solar Panel Mounting Bracket	0	1	0	2	0	0	4
Screw Pack	1	2	2	4	3	4	8

Tools You will Need



 Phillips Screwdriver

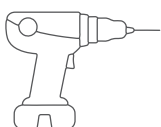


Power Drill (6 mm)





Hammer


 
At a Glance

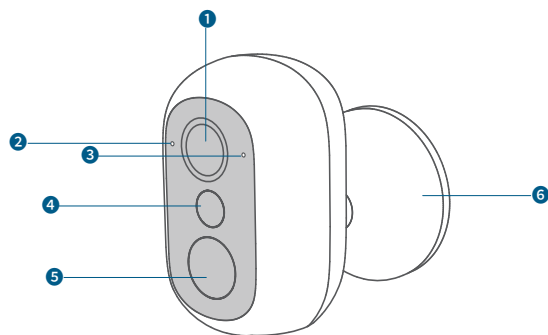

  - ❶ Camera Lens
- ❷ LED Indicator
- ❸ Microphone
- ❹ Spotlight
- ❺ PIR Sensor
- ❻ Magnetic Mounting Bracket
- ❼ Speaker
- ❽ USB-C Port
- ❾ microSD Card Slot
- ❿ Sync Button

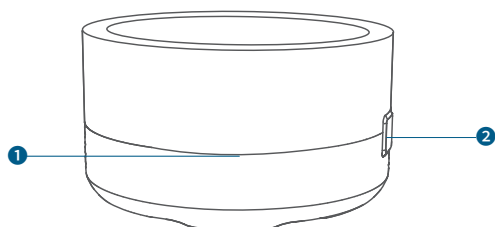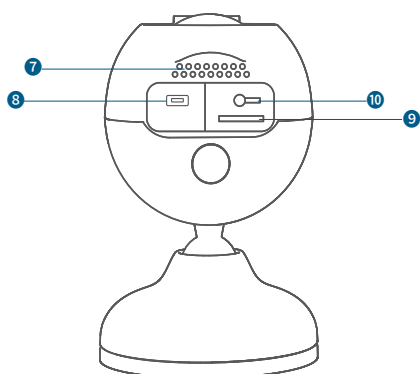

  - ❶ LED Indicator
- ❷ microSD Card Slot
- ❸ SYNC Button
- ❹ Ethernet Port
- ❺ USB-C Port

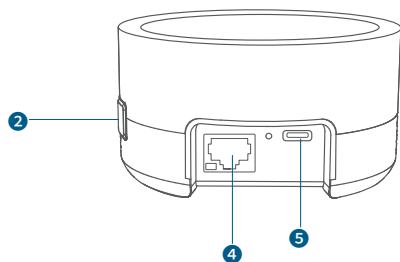
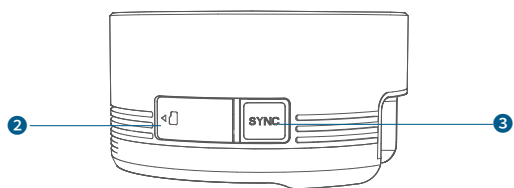


Before Mounting


1. Download the eufy App



  
2. Add HomeBase Mini

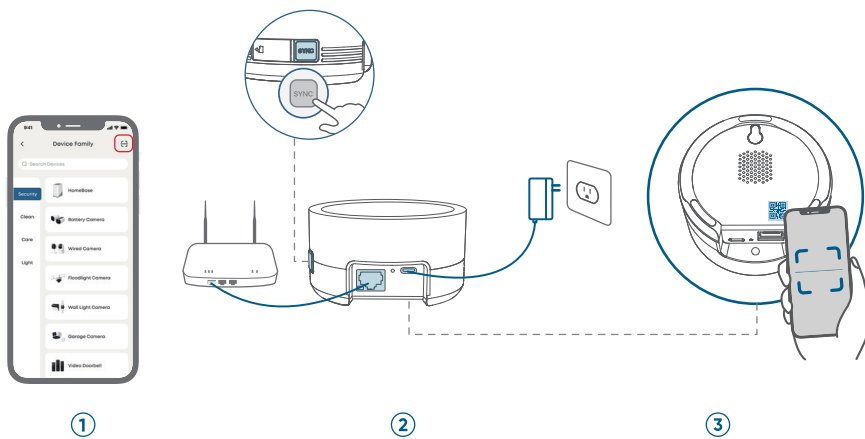

 3. Add the Camera

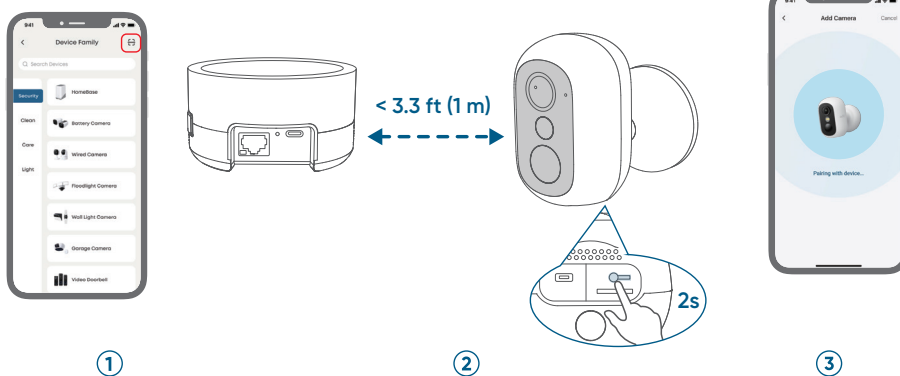


 
4. Fully Charge the Camera

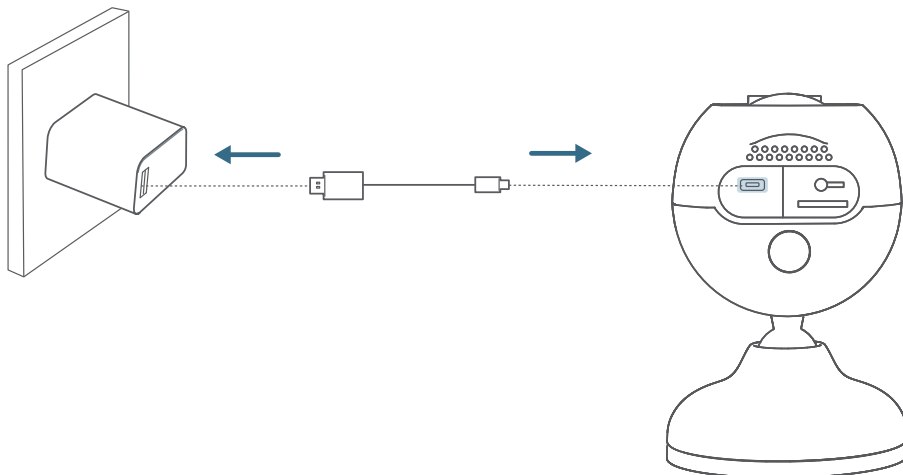

You can check the battery level in the app.

5. Insert and Remove the microSD Card (Optional)

  - ① Insert the microSD card with its pins facing up. Press the card into the slot until it clicks into position.
- ② To remove the microSD card, press it inward until it springs loose, then pull it out from the slot.

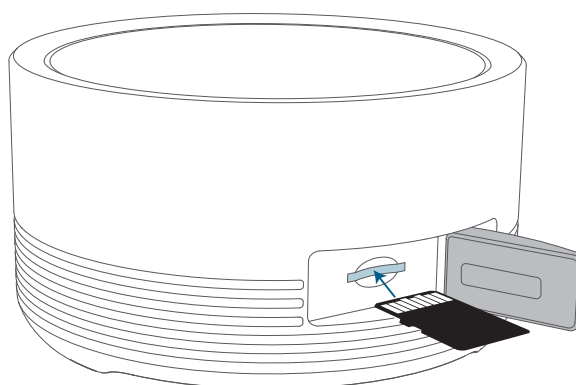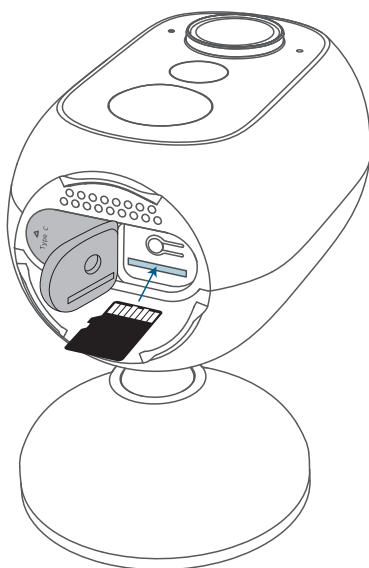


Do not insert or remove the microSD card when HomeBase Mini is powered on.

Before Mounting

1. Choose a Location


Recommended Location:

 - Height of less than 2 m (7 ft)
- 7 m (23 ft) field of view
- Strong Wi-Fi signal

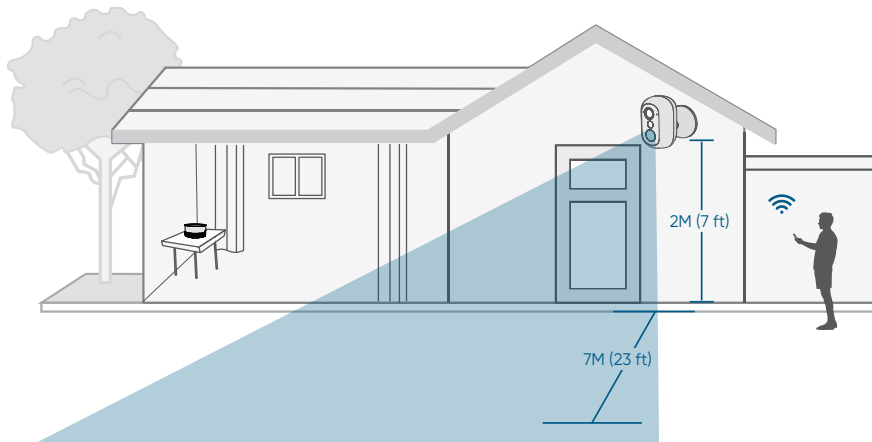


2. Install the Mounting Bracket

 ① Slide down the mounting base to detach it from the magnetic mounting bracket.

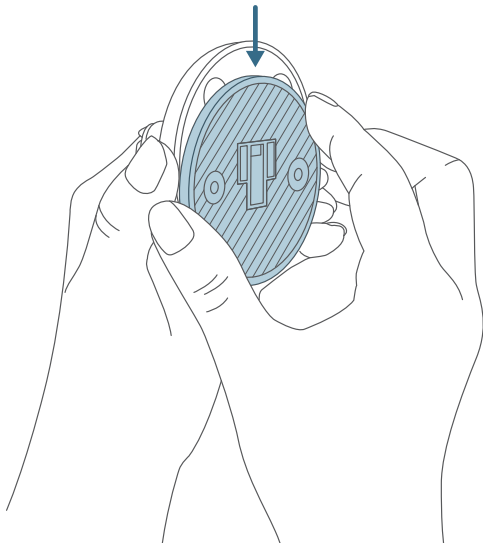

 
② Adjust the ball joint to the illustrated angle, then align the bracket with the hole on the back of the camera for installation.

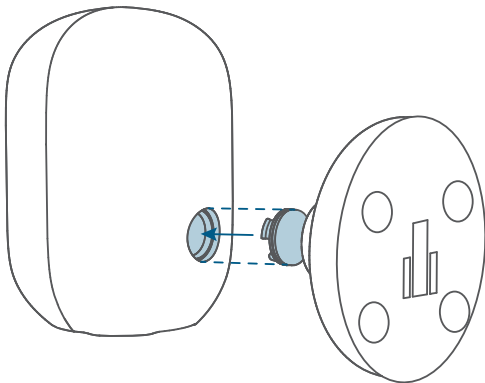


3. Select a Mounting Option



 Always position the camera upright to prevent water intrusion.

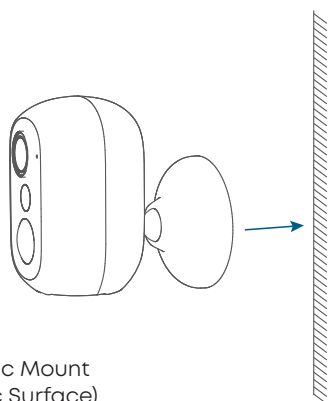


Magnetic Mount
(Metallic Surface)

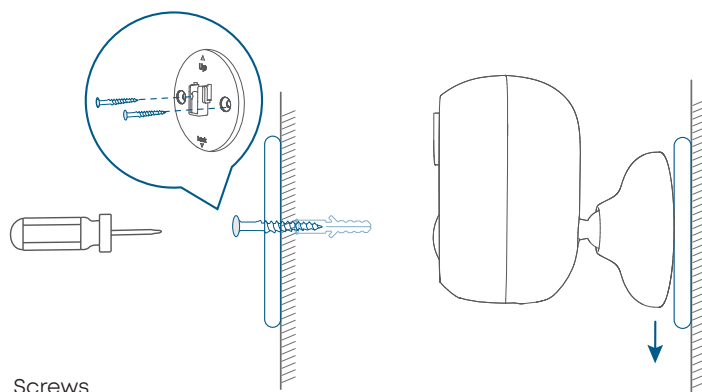 


Screws

 3.1 Install the Camera with Magnetic Mount (Metallic Surface)

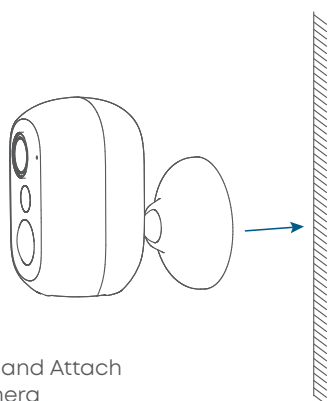


Position and Attach
the Camera

 
3.2 Install the Camera with Screws

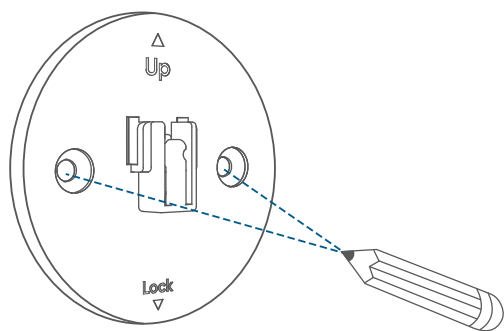


① Position

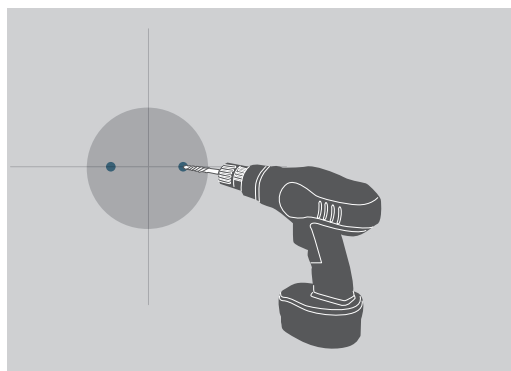 


② Drill Holes

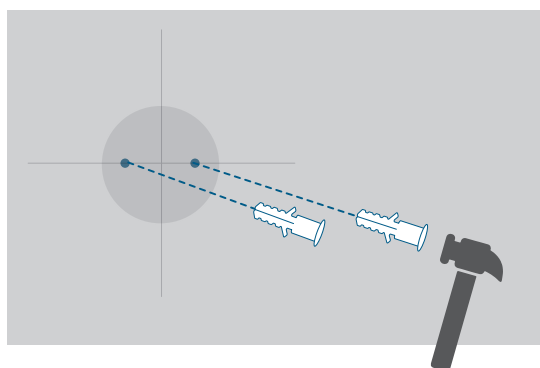 


  ③ Insert Anchors (Skip for Wooden Walls)

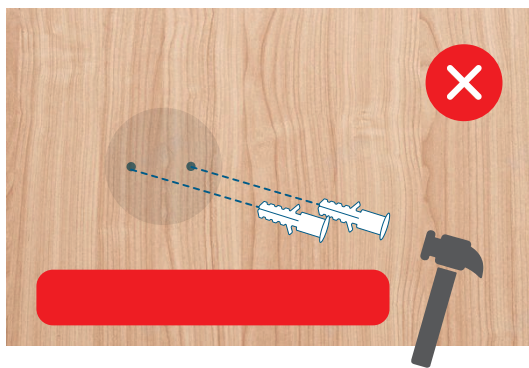

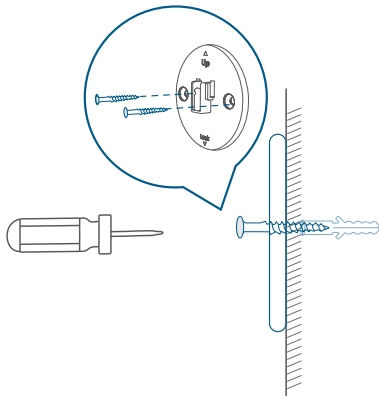


④ Install the Mounting Base

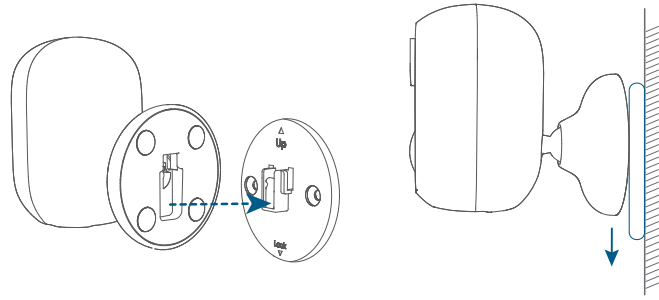 


⑤ Slide the Camera onto the Mounting Base

4. Adjust the Camera Field of View

 ① Remove Protective Film

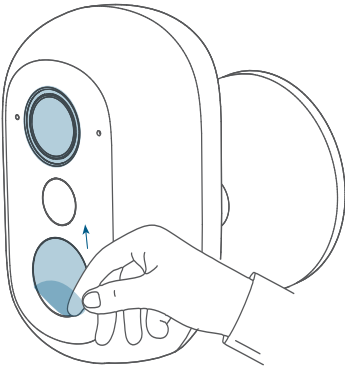


② Rotate to Get the Optimal Angle

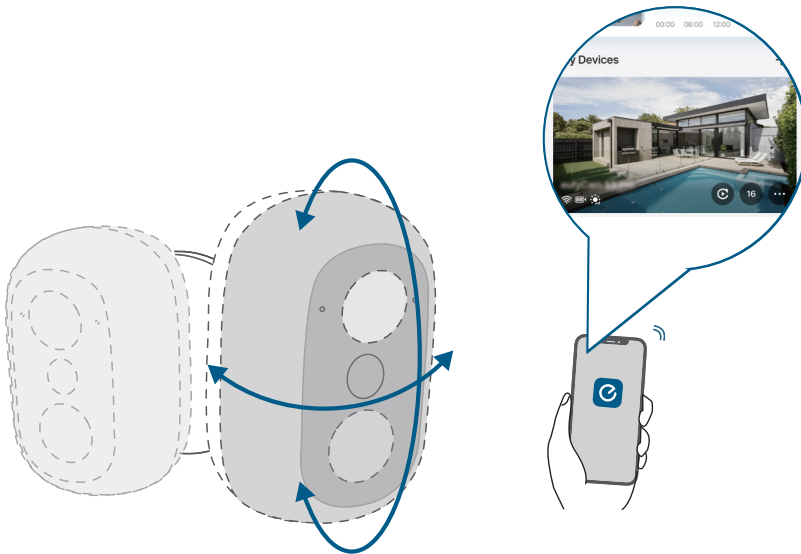 


Detaching the Mounting Bracket (Optional)

 1. Adjust the bracket to the illustrated angle.

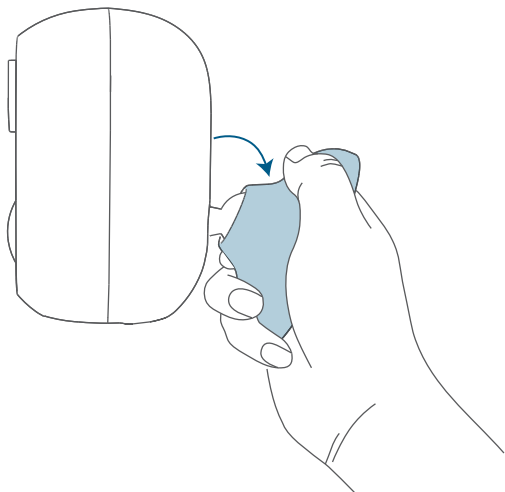

 2. Hold the bracket firmly and bend it outward and downward to detach the camera and bracket.

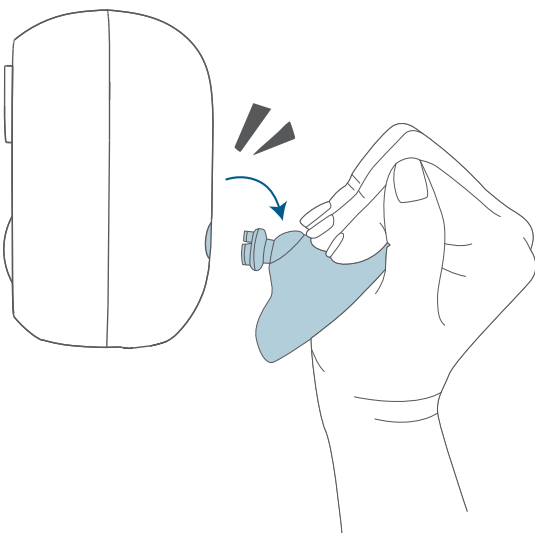

Congratulations!



Now you're all set to use your eufyCam C35!
Please explore more in the eufy app.

Notice

- Once inserted, the microSD card will serve as the primary storage medium, prioritizing the storage of system-generated data (such as logs and configuration files) and video recordings from the cameras.
- Power the HomeBase Mini with the included 5V/2A power adapter. The device will not function properly if powered by a 5V/1A adapter.

eufyCam C35:

Default Open Port 1: Wi-Fi (2.4GHz)

Port Description:

1. When powered on for the first time or after a reset, if there is no configured Wi-Fi information, it may enter network pairing mode (such as AP/BLE pairing);
2. In normal working mode, it will automatically connect to the router and save the SSID and password;
3. If you need to switch Wi-Fi configuration, you can use the App or follow the instructions in the manual to reconfigure the network.
4. When connected to HomeBase, the device listens on UDP port 10200 to receive audio and video data for downstream intercom functionality.
5. In Solo mode, the device listens on UDP port 32108 to receive app device discovery, LAN device discovery, and establish P2P connections.
6. In Solo Mode, the device dynamically listens on random UDP ports between 10000 and 30000 for P2P communication, including command transmission/reception and data transfer.

Default Open Port 2: BLE (Bluetooth Low Energy)

Port Description:

1. Bluetooth remains inactive during normal device operation. It automatically enables broadcast and communication functions during the binding process to provide network configuration services. After the network configuration is completed, BLE pairing will automatically be disabled.
2. When connecting the phone and camera directly, Bluetooth will automatically turn on and provide communication services. When this feature is disabled, Bluetooth will automatically turn off.

HomeBase Mini:

Default Open Port: Wi-Fi (2.4GHz)

Port Description:

1. HomeBase will activate a Wi-Fi hotspot upon power-up to establish connection with cameras;
2. HomeBase connects to your home router using standard Wi-Fi (2.4GHz/5GHz) for data upload, remote management, and cloud interaction. Encryption uses WPA2 or higher.

Default Open Port 2: Ethernet Port

1. After initial power-on or reset, HomeBase typically obtains an IP address via DHCP;
2. Check and confirm the Ethernet connection status in the device management interface or app. To use a wired connection, simply insert the Ethernet cable and ensure your router or switch is functioning properly.