


## Step 1 Install the Wi-Fi Module (T8709)


Connect the cable to the Type-C port on the back of the eufy Network Video Recorder (NVR).

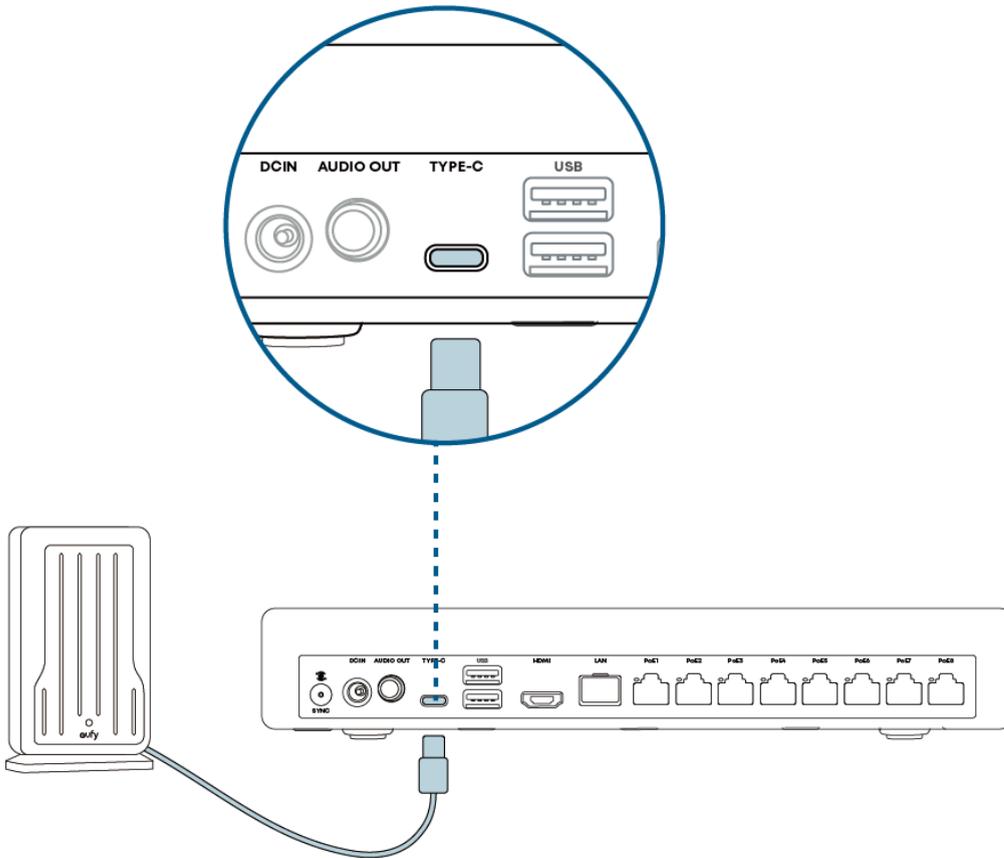


## Step 2 Pair with eufy Cameras

❶ Wait until the status indicator on the Wi-Fi module turns blue.



💡 It may take a few minutes for the Wi-Fi module to complete the update before pairing devices for the first time.

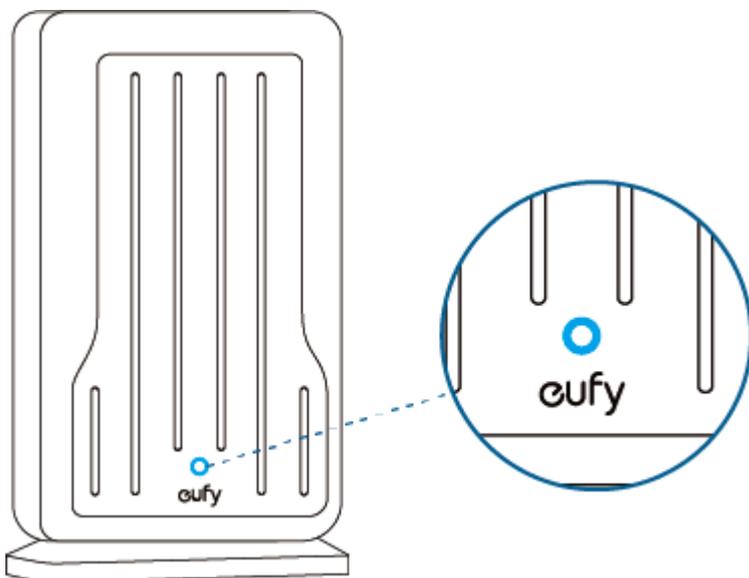



2 Tap **Add Device** or the **+** icon in the eufy app.

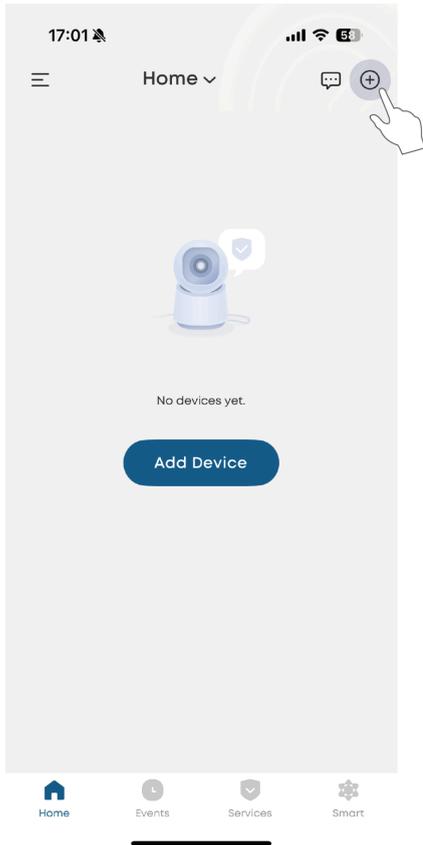

3 Scan the QR code on the camera.

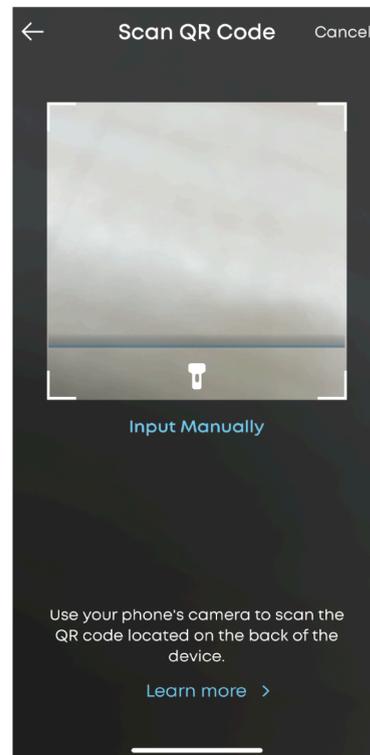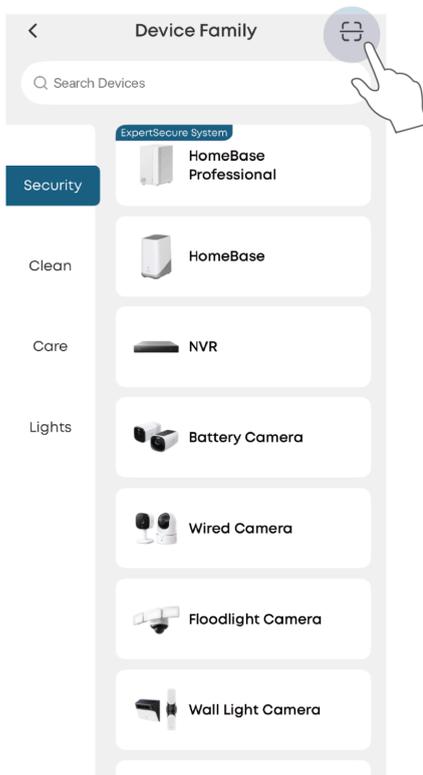


④ Follow in-app instructions to pair the camera.

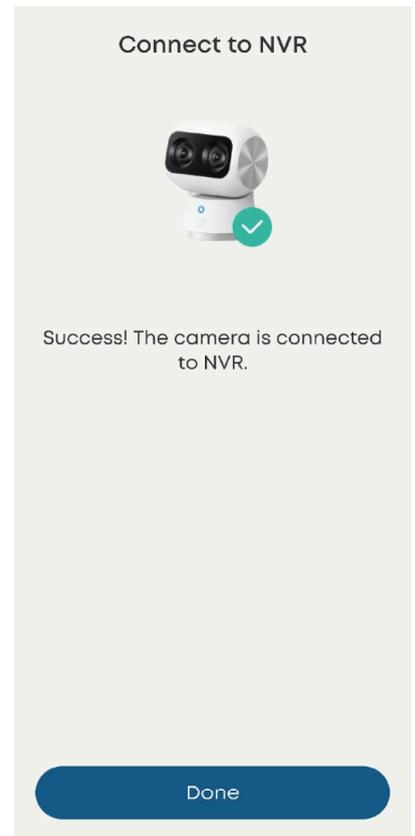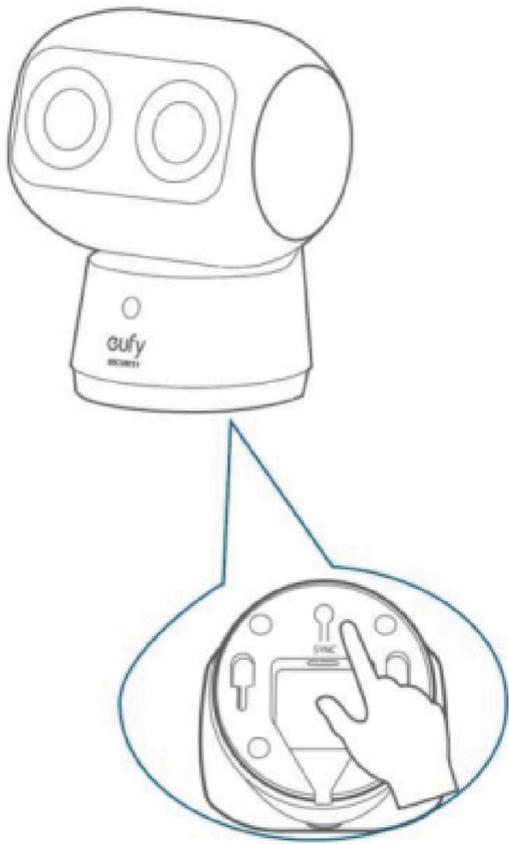

### Step 3 Check the Signal

Check the signal in the app.

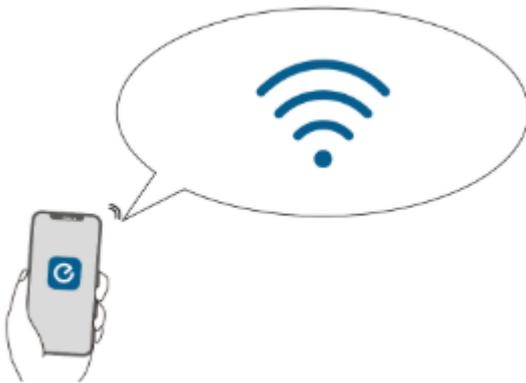

## LED Indication

LED Indication	Status
Off	Powered Off / Sleep Mode
Steady Purple	Powering On
Steady Blue	Powered On / Transferring data
Flashing Blue	Pairing with Cameras or Sensors
Alternately Flashing Red and Blue	OTA Update
Slowly Flashing Red	Wi-Fi module error
Steady Red	NVR disconnected

## Wi-Fi Module - Compatible eufy Devices

Type	Product Name	Model	One-Tap Migration
eufyCam	eufyCam S4	T8172	
	eufyCam S3 pro	T8162	
	eufyCam S330	T8160 T8160C	
	eufyCam S300 (eufyCam 3C)	T8161	
	eufyCam E330 (Professional)	T8600	N/A
	eufyCam E40	T8144	
	eufyCam 2C	T8113 T8113V	
	eufyCam 2C Pro	T8142 T8142R	
	eufyCam 2	T8114	
	eufyCam 2 Pro	T8140 T8140R	

	eufyCam Wire-Free HD Security Camera	T8111	N/A
	Outdoor Cam E220	T8441 T8441X	N/A
SoloCam	SoloCam E42	T8173	✓
	SoloCam S40	T8124	N/A
	SoloCam S230	T8124R	N/A
	SoloCam S340	T8170	✓
	SoloCam S220	T8134	✓
	SoloCam C210	T8B00	✓
	SoloCam E30	T8171	✓
IndoorCam	Indoor Cam C120	T8400 T8400X	N/A
	Indoor Cam E220	T8410	N/A
	Indoor Cam E220	T8410C	✓
	IndoorCam Mini	T8414	N/A
	Indoor Cam E30	T8417	✓
	Indoor Cam S350	T8416	✓
	Indoor Cam C220	T8W11C	N/A
	Indoor Cam C210	T8419	N/A
Floodlight Cam	Floodlight Cam E340	T8425	✓
	Floodlight Cam E30	T8426	✓
Video Doorbell	Video Doorbell S220	T8210	N/A
	Video Doorbell S220	T8210L T8210P T8210X T8210XL T8210C	✓
	Video Doorbell C210	T8222	✓

	Video Doorbell E340	T8214	
	Video Doorbell C31	T8223	
	Video Doorbell C30	T8224	
Sensor	Entry Sensor E20	T90E0	N/A
	Motion Sensor E20	T90M0	N/A
	Smoke Alarm E10	T90S0	N/A
	Flood&Freeze Sensor E20	T90F0	N/A
	Key Fob E10	T90K0	N/A
	Panic Button E10	T90P0	N/A
	Indoor Siren E20	T90R0	N/A
	Water Sensor	T8920	N/A
	Motion Sensor	T8910	N/A
	Entry Sensor	T8900	N/A
	Smoke Listener	T8931	N/A
	Keypad	T8960	N/A
	Outdoor/ Indoor Siren	T8970	N/A