

eufy Key Fob E10


A key fob is a small, portable remote control device used to wirelessly operate security systems. It features buttons for disarming alarms, switching arming (home/away) modes, and triggering emergency (SOS) alerts. Compact and easy to carry, they enhance convenience and security by providing quick access to controlled systems without needing a smartphone or manual input.

View the [How-to Video](#)

What's in the Box

- Key Fob
- Quick Start Guide

At a Glance

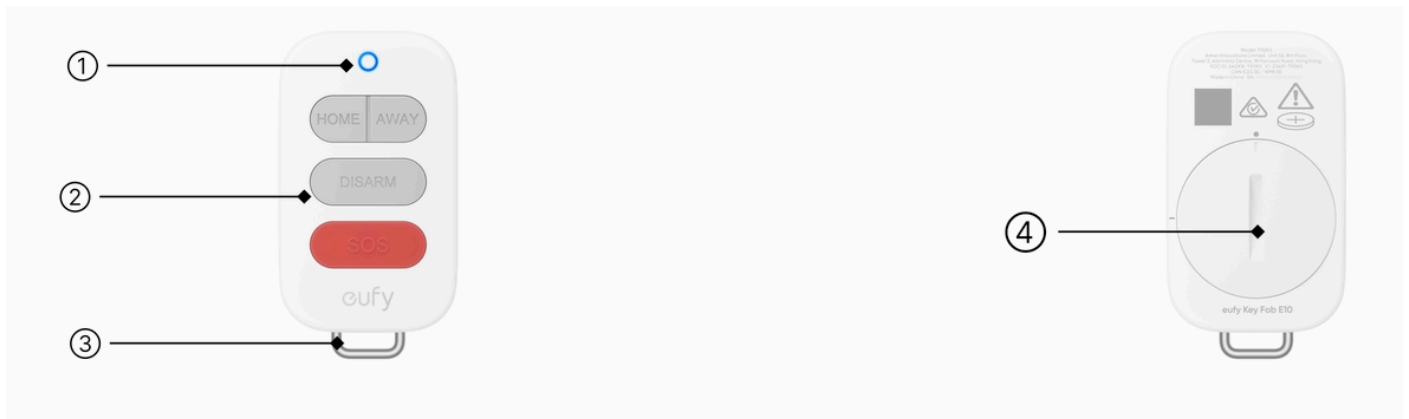

1. LED Indicator
2. Function Buttons (HOME, AWAY, DISARM, SOS)
3. Keyring
4. Battery Compartment

Set Up the Motion Sensor

💡 Before setting up the sensor, make sure you've completed the setup of the HomeBase.

1. Download the eufy app, and sign in or create an account.



2. Tap the + icon on the home screen, and you can either:
 - a. Scan the QR code on the device, or
 - b. Select **Alarm System** > **eufy Key Fob E10** in the Device Family, and follow in-app instructions to complete the setup.

💡 Press the SOS button for 2 seconds until the LED blinks blue when pairing.



Test the Key Fob

In Test mode, press the any button for 2 seconds, and the LED blinks red twice. An event will be displayed in the app.

Using the Key Fob

SOS

To trigger the alarm, press the SOS button for 2 seconds, the LED will flash red quickly twice. The eufy app will report an event, and an alarm will be triggered.

AWAY

When you leave home, press the AWAY button for 2 seconds. The LED will flash twice, and the system will arm.

Disarm

When you return home, press the Disarm button for 2 seconds. The LED will flash twice, and the system will disarm.

Home

When you are at home, press the Home button for 2 seconds. The LED will flash twice, and the system will enter the Home mode.

Switch Modes

Press a function button for 2 seconds to choose your preferred mode. Once selected, the app will record the event.

Scenario

- **Home Security Control** – Switch Arm Mode / disarm the security systems with one press.
- **Workplace & Home Security** – Grant access to restricted areas without physically being inside the facility.
- **Elderly & Disabled Assistance** – Provide easy control of smart home devices for those with mobility challenges, or can't use cellphones.

Recommendations

- **Attach to a Keychain or Lanyard** – Easy access without risk of misplacement.
- **Keep Extra Fobs for Family Members** – Ensure all authorized users have convenient access.
- **Regularly Check Battery Life** – Key fobs use replaceable or rechargeable batteries.

LED Indication

Blinking Blue: Pair Mode

Solid Blue for 5 seconds: Paired / Connected to the network successfully

Red flashes twice quickly: Press any of the function buttons for 2 seconds, and operation is successful

Red flashes every 60 seconds: Low battery

Flashing **Red** and **Blue** alternately: Reset Mode or during OTA

Red and **Blue** flashes alternately twice: Offline / Communication failed

Replacing the Battery

Regularly check the battery level and replace when needed.

1. Twist the battery cover to the [–] position (as shown in Figure 2) with a coin.
2. Remove the cover and replace with a new CR2032 battery (Figure 3 & 4).
3. Put the cover back in place, and twist the battery cover to the [[]] position with a coin (Figure 5 & 6) .



Factory Reset

Press the SOS button for 10 seconds to reset the device.

Specifications

Dimension: 62.1*34*11 mm

Connectivity: Sub-1G

Battery: CR2032

Working Temperature: 0°C to 50°C (32°F to 122°F)

Storage Temperature: -20°C to 60°C (-4°F to 140°F)

Working Humidity: 0 to 85%