


Quick Start Guide


Using Your RoboVac

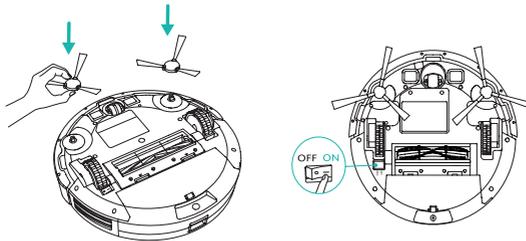


1

2

Remove the sticker next to the power switch, and the foam blocks beside the bumper before use.

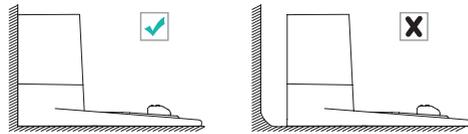


3

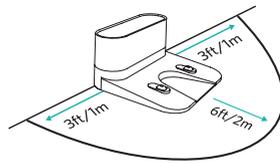


4

- Always keep the Charging Base plugged in, otherwise RoboVac will not automatically return.
- When the Charging Base connects to AC power, the LED indicator on the Charging Base is SOLID WHITE.

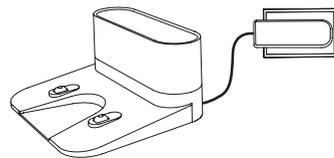


5

Fully charge RoboVac before use. The LED indicator on RoboVac breathes orange while charging, and is solid blue when fully charged.

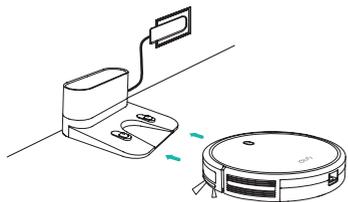

6


Refer to the Owner's Manual to learn how to select other cleaning modes and to set cleaning schedules.

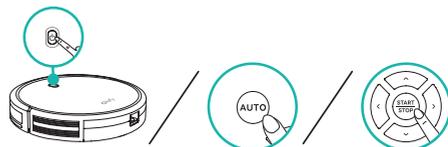

7

Important Tips

When using for the first time, follow RoboVac to observe and resolve any problems that may occur.

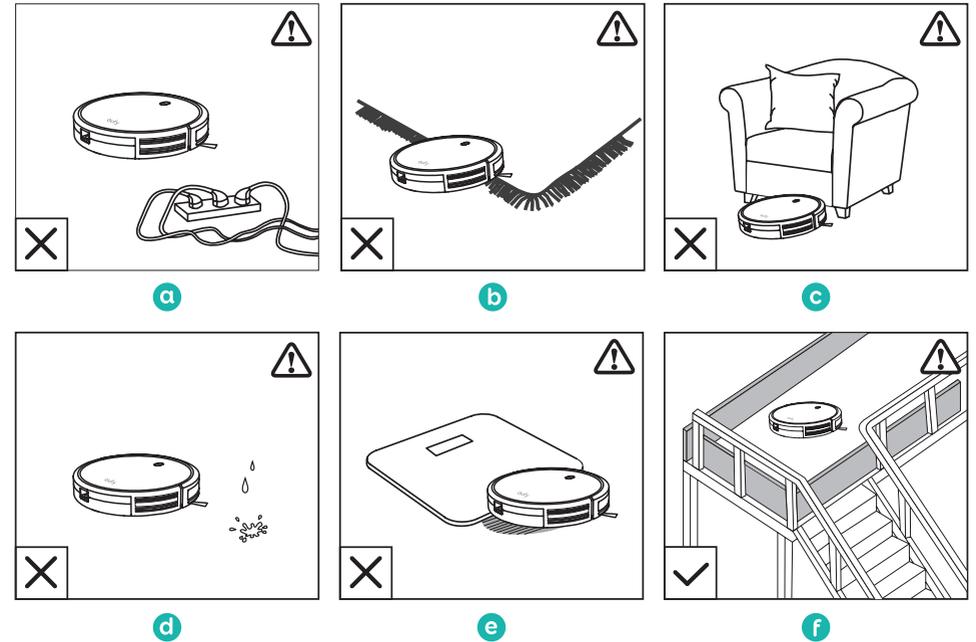




- a** Remove power cords and small objects from the floor that may entangle RoboVac.
- b** Fold tasseled edges of area rugs underneath to prevent tangling RoboVac. Avoid cleaning very dark-colored rugs or high-pile rugs thicker than 1.02 in/26 mm as they may cause RoboVac to malfunction.
- c** Keep RoboVac away from spaces lower than 2.87 in/73 mm to prevent RoboVac from getting stuck. If necessary, place a physical barrier to block off the problem areas.
- d** Keep RoboVac away from wet areas.
- e** RoboVac may climb on top of objects less than 0.63 in/16 mm in height. Remove these objects if possible.
- f** Anti-drop sensors prevent RoboVac from tumbling down stairs and steep drops. They may work less effectively if dirty or used on reflective/very dark-colored floors. It is recommended to place physical barriers to block off areas where RoboVac may fall.

Place physical barriers in front of fireplaces and areas that may cause damage to RoboVac if entered.


دليل البدء السريع

استخدام RoboVac


قم بإزالة المصق المجاور لمفتاح الطاقة وكذلك العوائق الإسفنجية المجاورة لممتص الصدمات قبل الاستخدام.

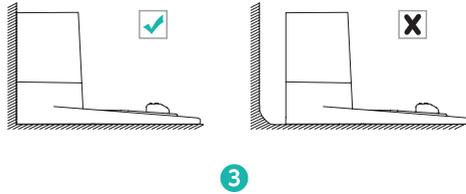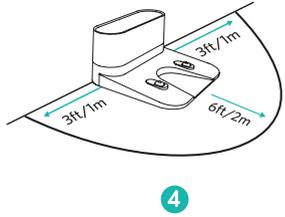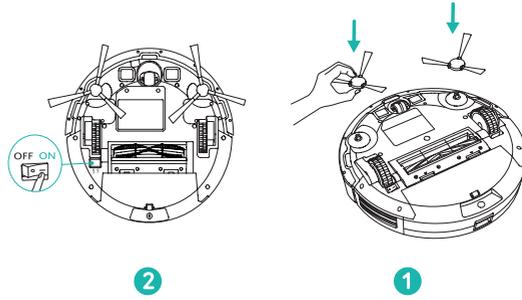


- أبق دائماً قاعدة الشحن متصلة بمصدر الطاقة، وإلا فلن يعود RoboVac إليها تلقائياً.
- عند توصيل قاعدة الشحن بطاقة التيار المتردد، يكون مؤشر LED الموجود على قاعدة الشحن ذا لون أبيض ثابت.

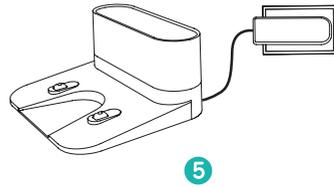


اشحن جهاز RoboVac شحنًا كاملاً قبل الاستخدام. يومض مؤشر LED الموجود على جهاز RoboVac باللون البرتقالي أثناء الشحن، ويتحول إلى اللون الأزرق الثابت عندما يصبح الجهاز مشحوناً بالكامل.

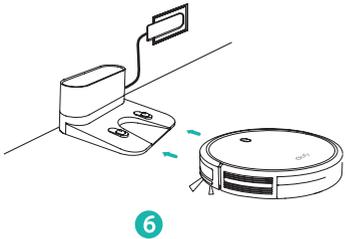

راجع دليل المالك للاطلاع على كيفية تحديد أوضاع التنظيف الأخرى ولتعيين مواعيد التنظيف المجدولة.

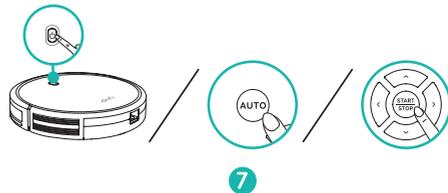

عند الاستخدام للمرة الأولى، اتبع جهاز RoboVac لملاحظة أي مشاكل قد تحصل وحلها.

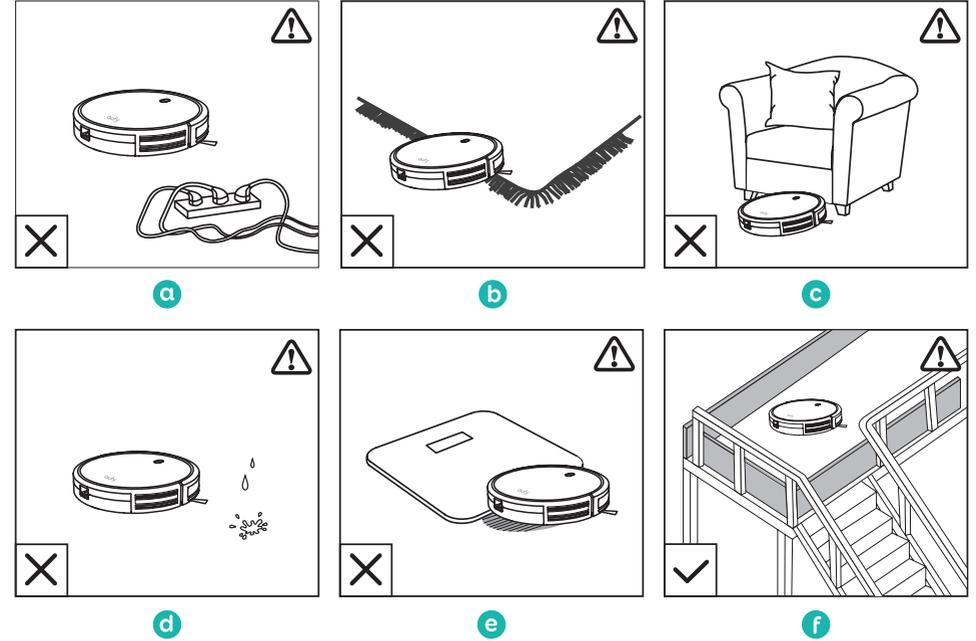

- a أزل أسلاك الطاقة والأغراض الصغيرة التي قد تعيق RoboVac من الأرض.
b اطو حواف السجادة المزينة بالشرابات للأسفل بهدف منع تشابك RoboVac. تجنب تنظيف السجاد طويل الوبر ذي اللون الداكن جداً أو السجاد الذي تتجاوز سماكته 1,02 بوصة/26 مم بما أنه قد يتسبب بتعطيل جهاز RoboVac.
c أبق RoboVac بعيداً عن المساحات الأكثر انخفاضاً من 2,87 بوصة/73 مم لتجنب أن يعلق RoboVac. وعند الضرورة، ضع حاجزاً مادياً لمنع الوصول إلى المناطق التي قد تتسبب بمشاكل.
d أبق RoboVac بعيداً عن المناطق الرطبة.
e يستطيع RoboVac التسلق فوق الأغراض ذات الارتفاع الأقل من 0,63 بوصة/16 مم. أزل هذه الأغراض إذا أمكن.
f تحول أجهزة الاستشعار المضادة للسقوط دون تشقلب جهاز RoboVac على السلالم والمنحدرات الشديدة. وقد تعمل بفعالية أقل إذا كانت متسخة أو تم استخدامها على أرضيات عاكسة أو ذات لون داكن جداً. يوصى بوضع حواجز مادية لمنع وصول RoboVac إلى المناطق التي قد يقع فيها.

ضع حواجز مادية أمام المواقف والمناطق التي قد تلحق ضرراً بجهاز RoboVac في حال دخوله إليها.