

At a Glance

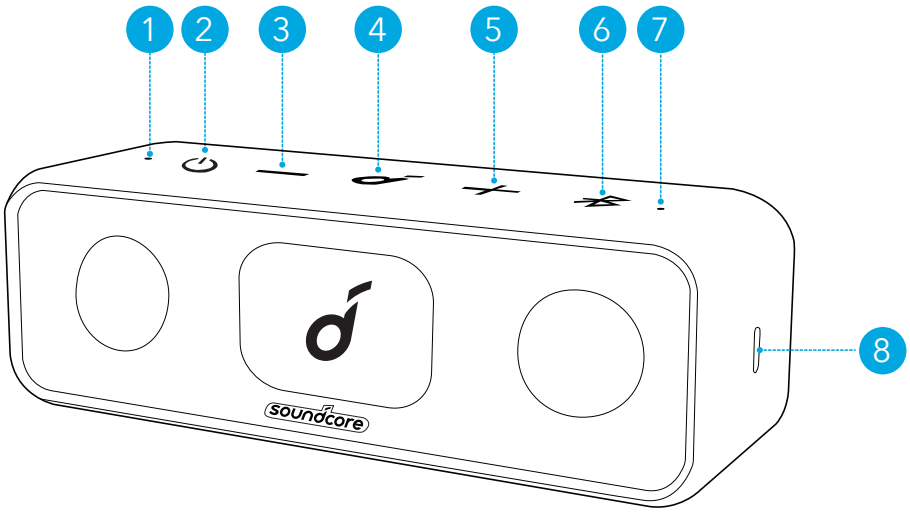

1. Power LED
2. Power button
3. Volume down button
4. Multi-function button
5. Volume up button
6. Bluetooth/PartyCast button
7. Bluetooth/PartyCast LED
8. USB-C charging port


Charging

- Fully dry off the USB port before charging.
- Use the provided USB-C cable to prevent any damage.
- Fully charge this speaker before the first use to prolong the lifespan of the built-in battery.
- Disconnect this speaker from the charger when fully charged. Do not charge for extended periods.

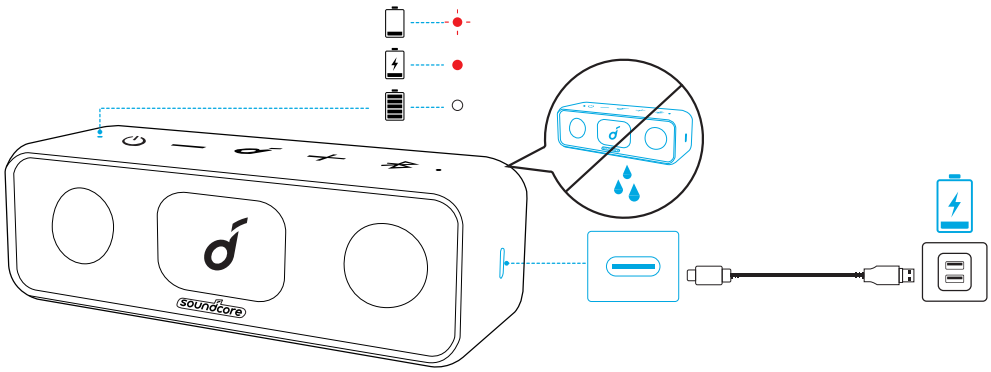

-●-	Low battery	Flashing red
●	Being charged	Steady red
○	Fully charged	Steady white

Powering On/Off

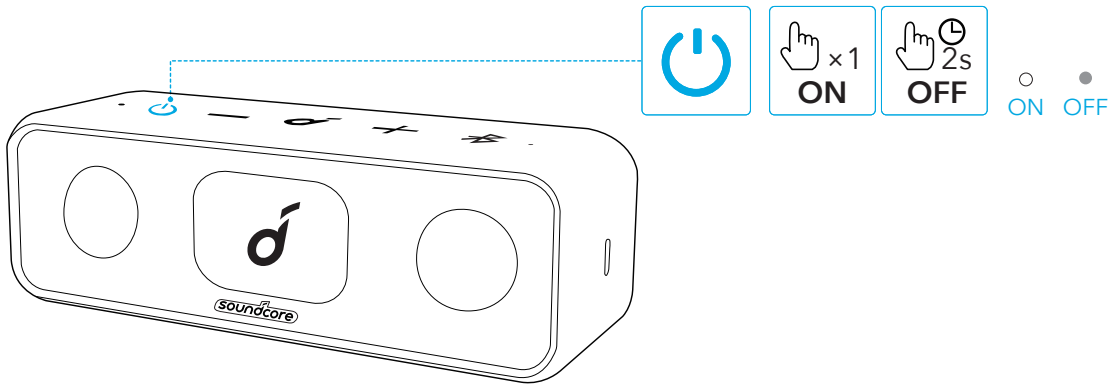


Power on	⏻	Press
Power off	⏻	Press and hold for 2 seconds

- This speaker will power off automatically 30 minutes after no audio input or button inactivity.

Using Your Soundcore 3

Bluetooth Mode

With this speaker, you can enjoy music through your Bluetooth-enabled devices.

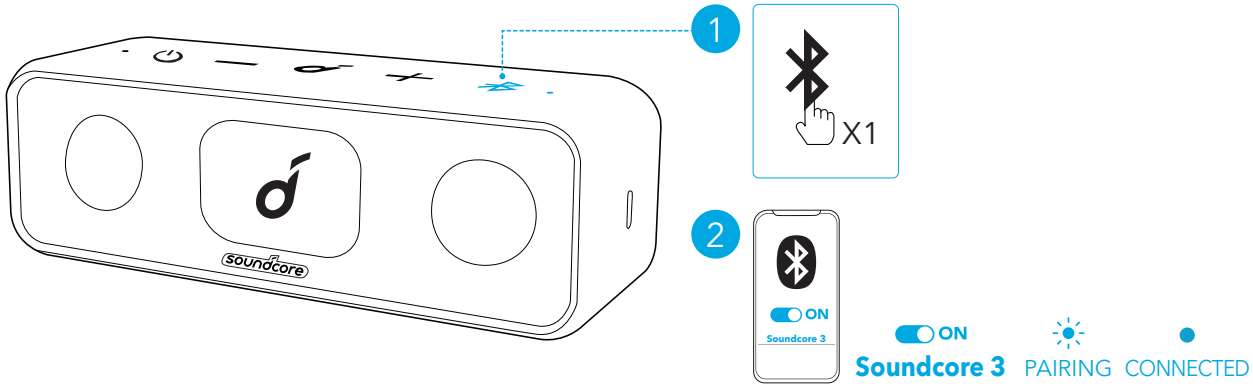

✱	Press	Enter Bluetooth pairing mode
Flashing blue	Flashing blue	Bluetooth pairing
●	Steady blue	Bluetooth connected

- Each time you power on your Soundcore speaker, it will automatically connect to your last connected device if available within the Bluetooth range. If not, press the Bluetooth button to enter Bluetooth pairing mode.

PartyCast Mode


You can wirelessly connect up to 100 identical Soundcore 3 speakers together.

1. Press and hold the Bluetooth button for 2 seconds on the Soundcore 3 that's currently connected to your device as the primary speaker.

2. Repeat Step 1 on the other Soundcore 3 you want to connect and then press the Bluetooth button twice to make them secondary speakers in PartyCast pairing.

3. The secondary speakers will automatically connect with the primary speaker.

* Soundcore speakers with PartyCast function can be connected with Soundcore 3.

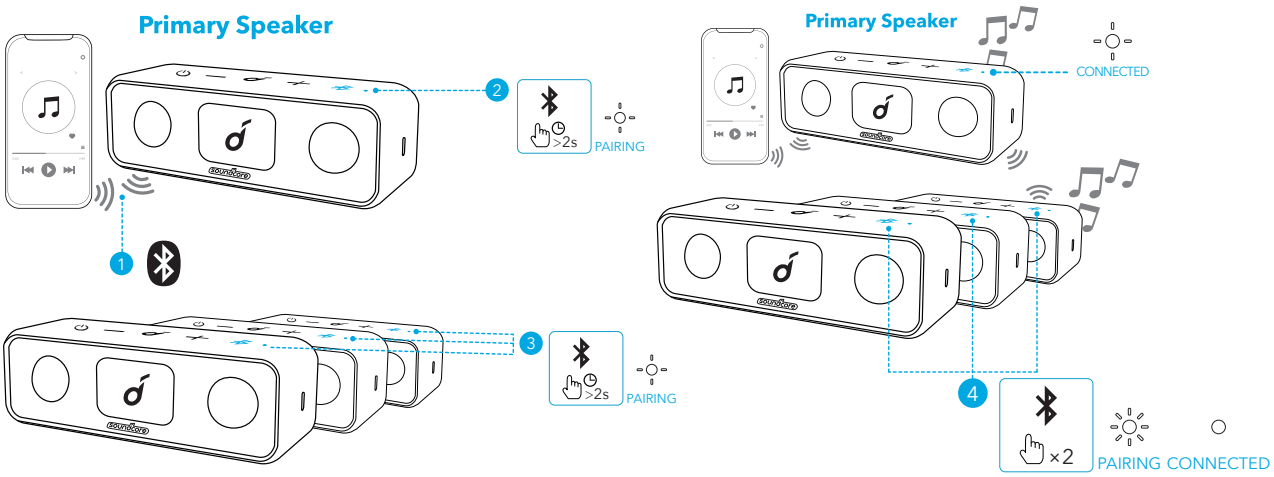

✱	Press and hold for 2 seconds	Enter PartyCast pairing mode
☼	Flashing white	PartyCast pairing
☼	Flashing white (Primary speaker)	PartyCast connected
○	Steady white (Secondary speakers)	

When PartyCast mode is successfully entered:

- Any secondary speaker can be switched to become the primary speaker by pressing the Blutooth button twice and connecting to your smartphone. Any primary speaker can be switched to become the secondary speaker by pressing the Bluetooth button twice and searching for an available primary speaker.
- To exit the PartyCast mode, press and hold the Bluetooth button on any speaker for 2 seconds.

Button Controls

♪	Press	Play/Pause
♪	Press twice	Next track
♪	Press three times	Previous track
—/+	Press or press and hold	Adjust volume
♪	Press	Answer/End a call
♪	Press	Answer a second incoming call and put the current call on hold
♪	Press and hold for 2 seconds	Reject an incoming call
♪	Press and hold for 2 seconds	Switch between a call on hold and an acitve call
♪	Press and hold for 2 seconds	Activate Siri or other voice assistant software

soundcore App

Download the soundcore App for enhanced product experience.

- Check product information
- Update firmware
- Indicate battery status
- Remotely control the volume and play/pause
- Customize EQ settings
- Set Auto-power off time



Specifications

Specifications are subject to change without notice

DC power input	5 V ⎓ 2 A
Battery capacity	6700 mAh
Audio output power	8 W x 2
Charging time	Appr. 4 hours
Playtime (varies by volume level and music content)	Up to 24 hours
Waterproof level	IPX7
Bluetooth version	5.0
Bluetooth range	20 m / 66 ft

Hereby, Anker Innovations Limited declares that this device is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. For the Statement of Compliance, visit the website: https://uk.soundcore.com/pages/psti-related.

Note: The 'x' of SN Code: xxxxxxxxxxxxxxx is a variable, see below table.

Variable 'x'	Range of variable	Content
Eighth	0-9 or A-F	Denotes the hardware version which is not effected on the safety compliance.
Ninth	8,9,A,B,C...	Denotes the year, 8 means 2018, 9 means 2019, A means 2020, B means 2021, C means 2022, and so on.
Tenth and Eleventh	01,02,03...	Denotes weeks, 01 means the first week in this year, 02 means the secondary week in this year, and so on.
Twelfth	1-7	Denotes date, 1 means Monday, 2 means Tuesday..., 7 means Sunday and so on.
The last five	00001-99999	Denotes serial No.

1. Power consumption in standby mode: ≤0.5W
2. Power management: ≤ 20min
3. Information of applicable adapter:
Brand: ANKER
Manufacturer: Anker Innovations Limited
Model: A2337
Input: 100-240V~ 1.0A, 50-60Hz
Output: 5.0V ⎓ 3.0A 15.0W / 9.0V ⎓ 3.0A 27.0W / 12.0V ⎓ 2.5A 30.0W / 15.0V ⎓ 2.0A 30.0W / 20.0V ⎓ 1.5A 30.0W (30.0W Max)

Default Open Port: Classic Bluetooth
Port Description: After the device is powered on, Classic Bluetooth visibility (or pairing mode) is automatically enabled, providing Bluetooth pairing (or control) services. The Bluetooth service is disabled when the device is powered off.